

HKE-RQTG-900 Sparepart List

List	Description	Code	Qty	Remarks
1	Ignitor	RQTG900-030302100120	1	
2	Pilot	RQTG900-030302150160	1	
3	Lighter Probe	RQTG900-030302150110	1	
4	JAA099A Gas Valve	RQTG900-030302112090	1	
5	Thermocouple	RQTG900-030302120020	2	
6	Gas Red Knob	RQTG900-030302030260	1	
7	Orifice	RQTG900-030301050300	2	
8	Water Switch	RQTG900-030302111560	1	
9	Steaming Safety Valve	RQTG900-030302111710	1	
10	Faucet	RQTG900-030302110550	1	
11	Water Discharge Valve	RQTG900-030302110630	1	
12	Oil Outlet	RQTG900-030302110670	2	316 1/2
14	Water Outlet	RQTG900-030301182910	1	∅ 60*170
15	Water Inlet	RQTG900-030301182920	2	∅ 22*148
16	Spring	RQTG900-030301020330	1	∅ 65*70
17	Pan Cover Gasket	RQTG900-030301110150	1	
18	Pan Cover Handle	RQTG900-030301170160	1	
19	High Temperature Magnetic	RQTG900-030301200220	1	20*60*10mm
20	Ajustable Feet	RQTG900-030301060600	4	